

FIG. 1

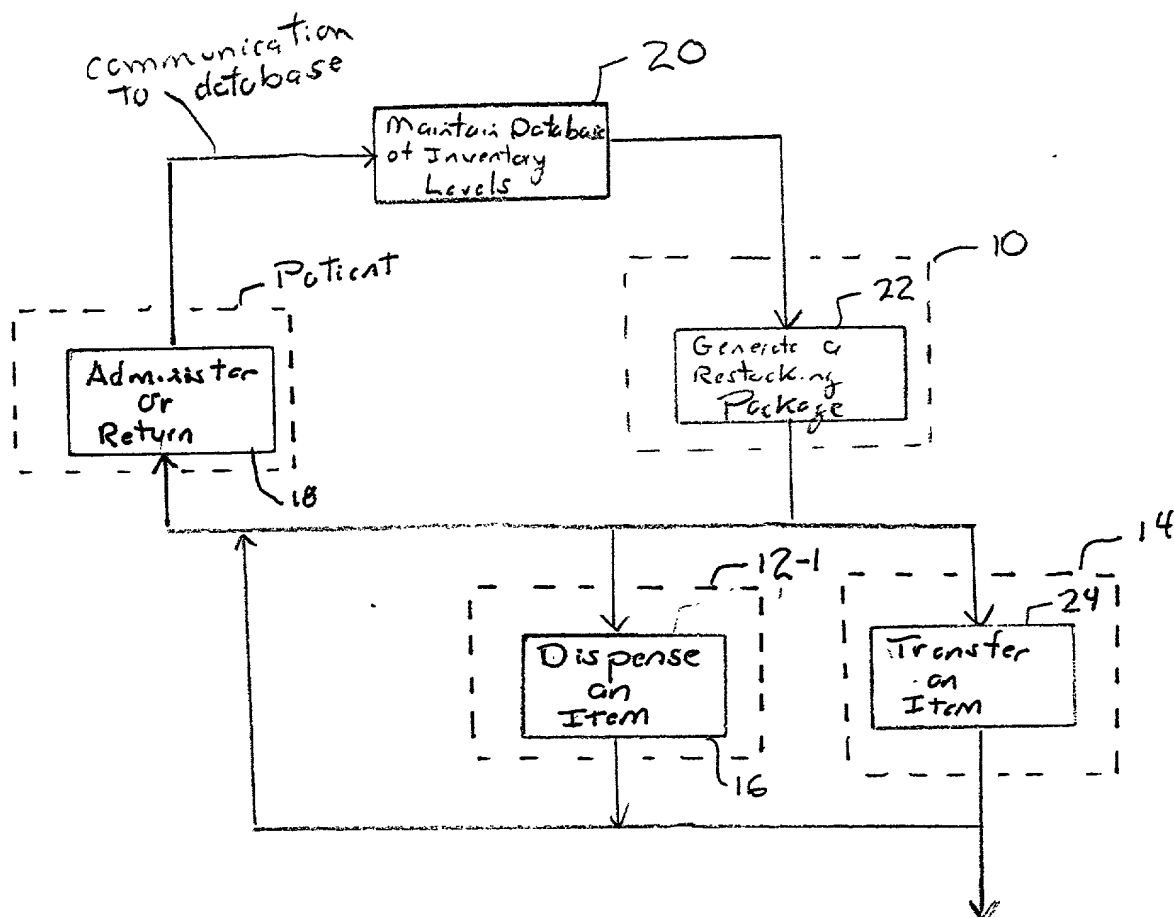
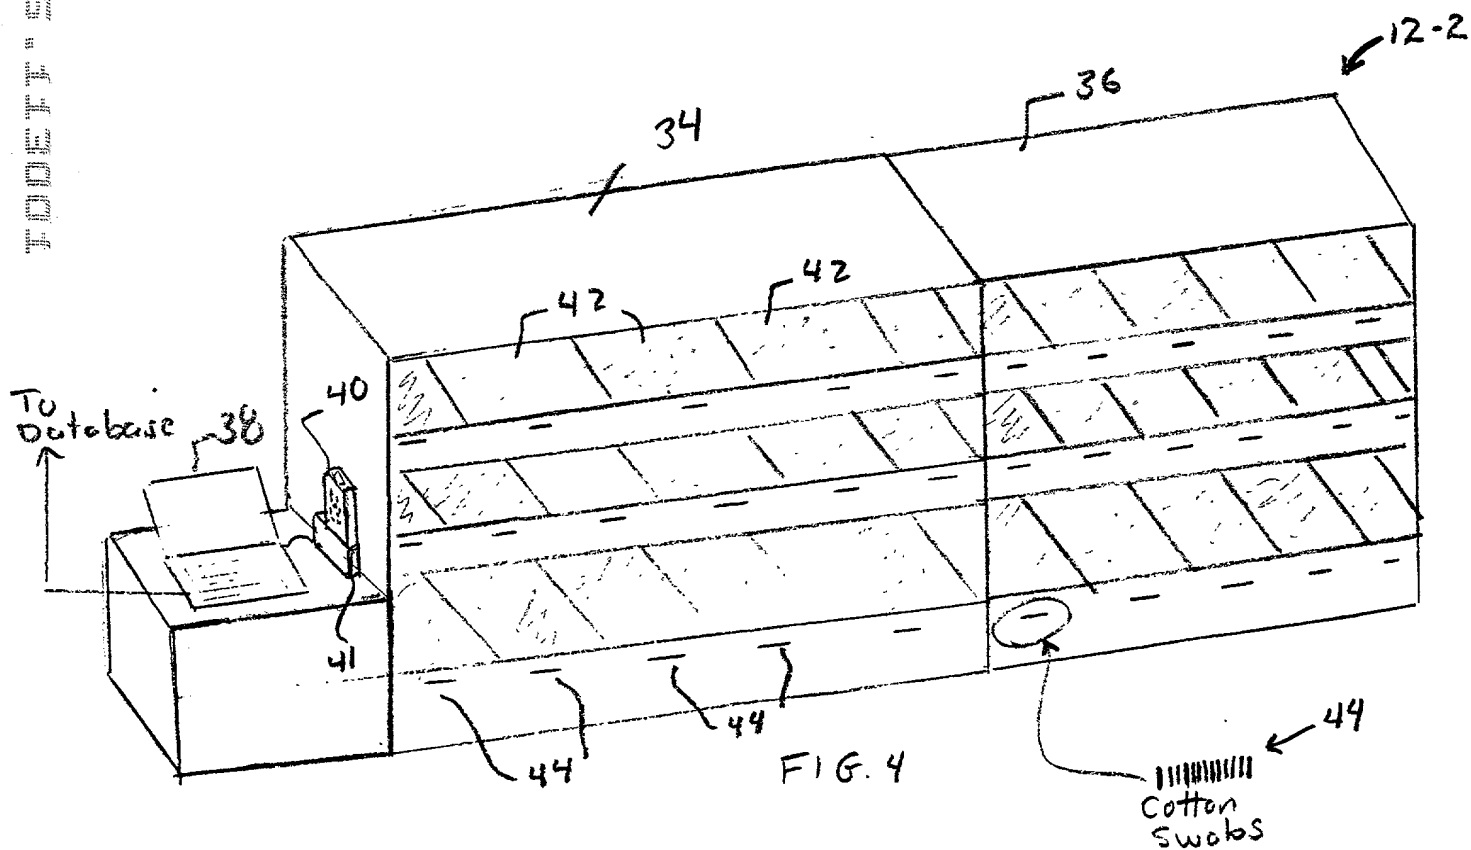
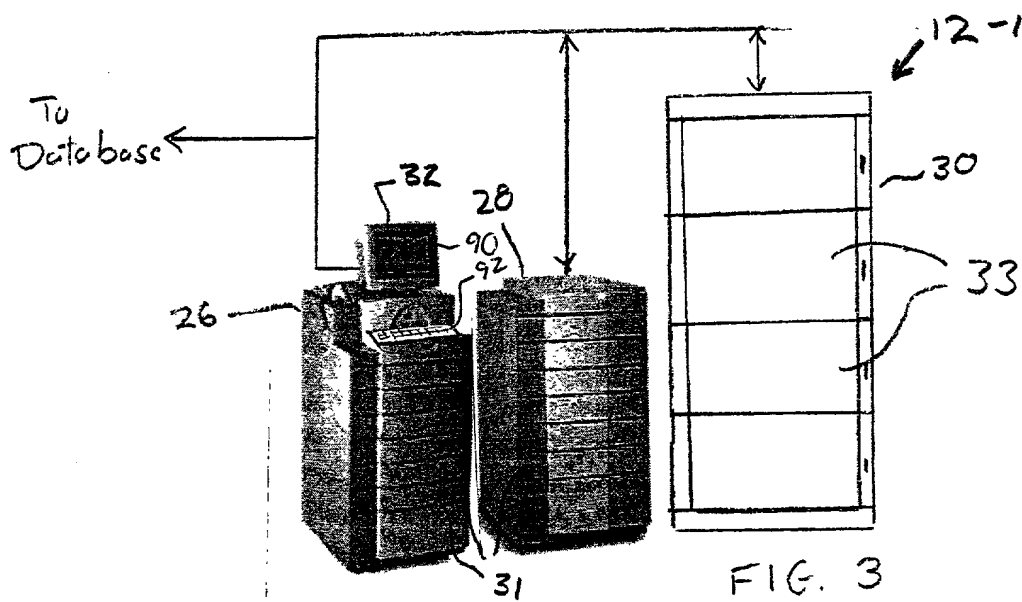


FIG. 2

To
Outobase



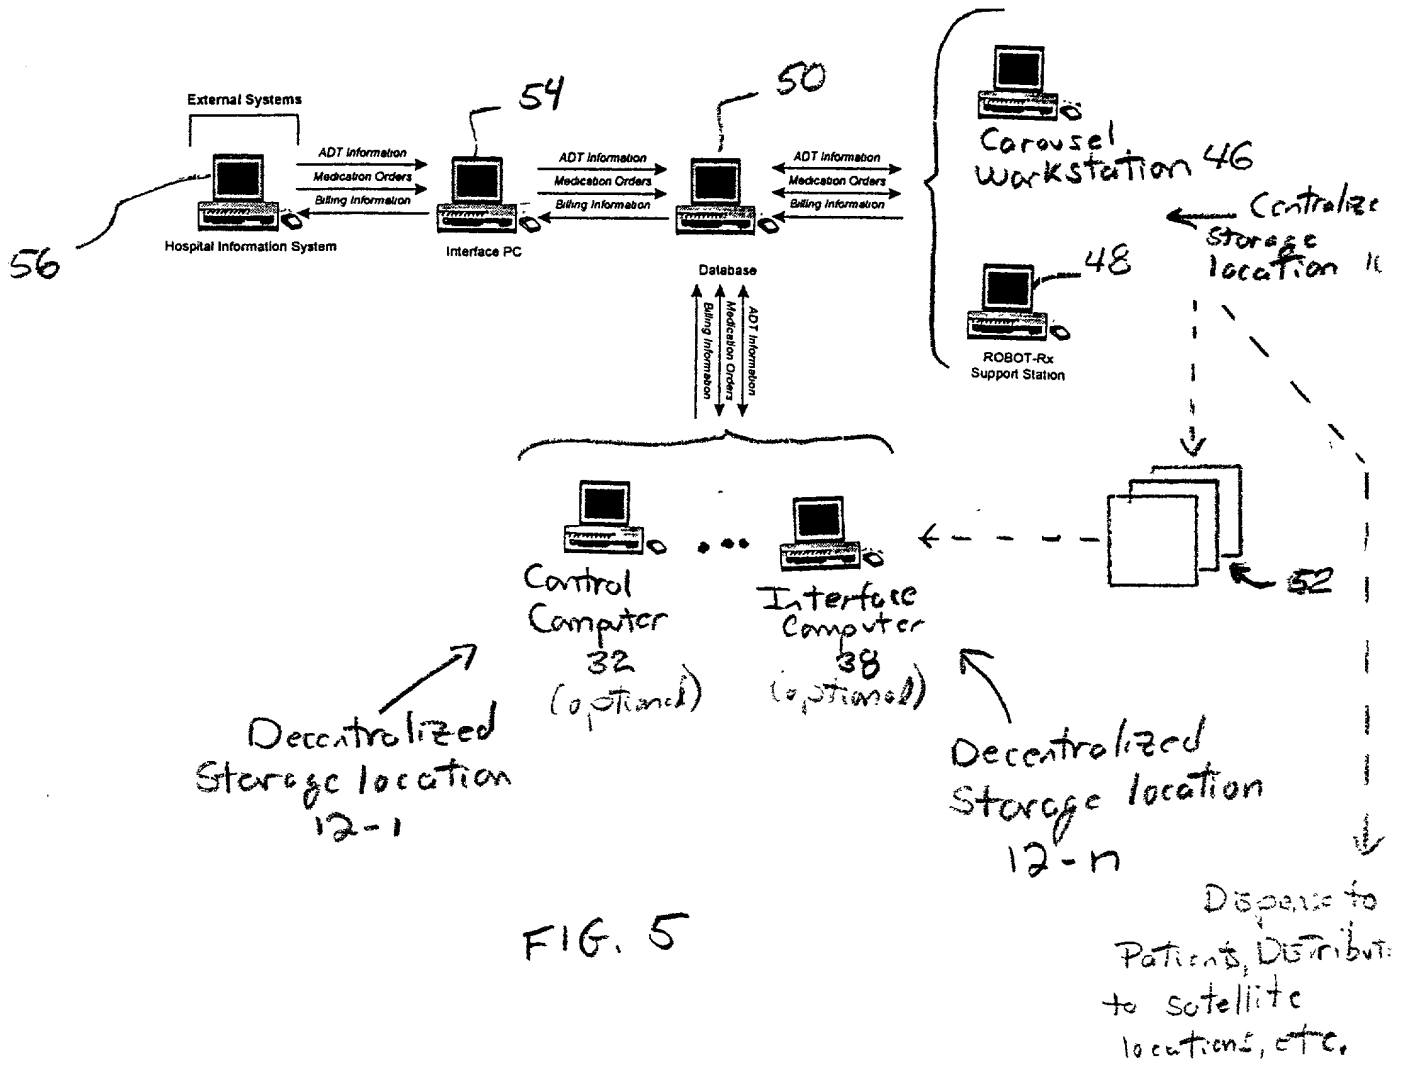


FIG. 5

60-1



FIG. 6

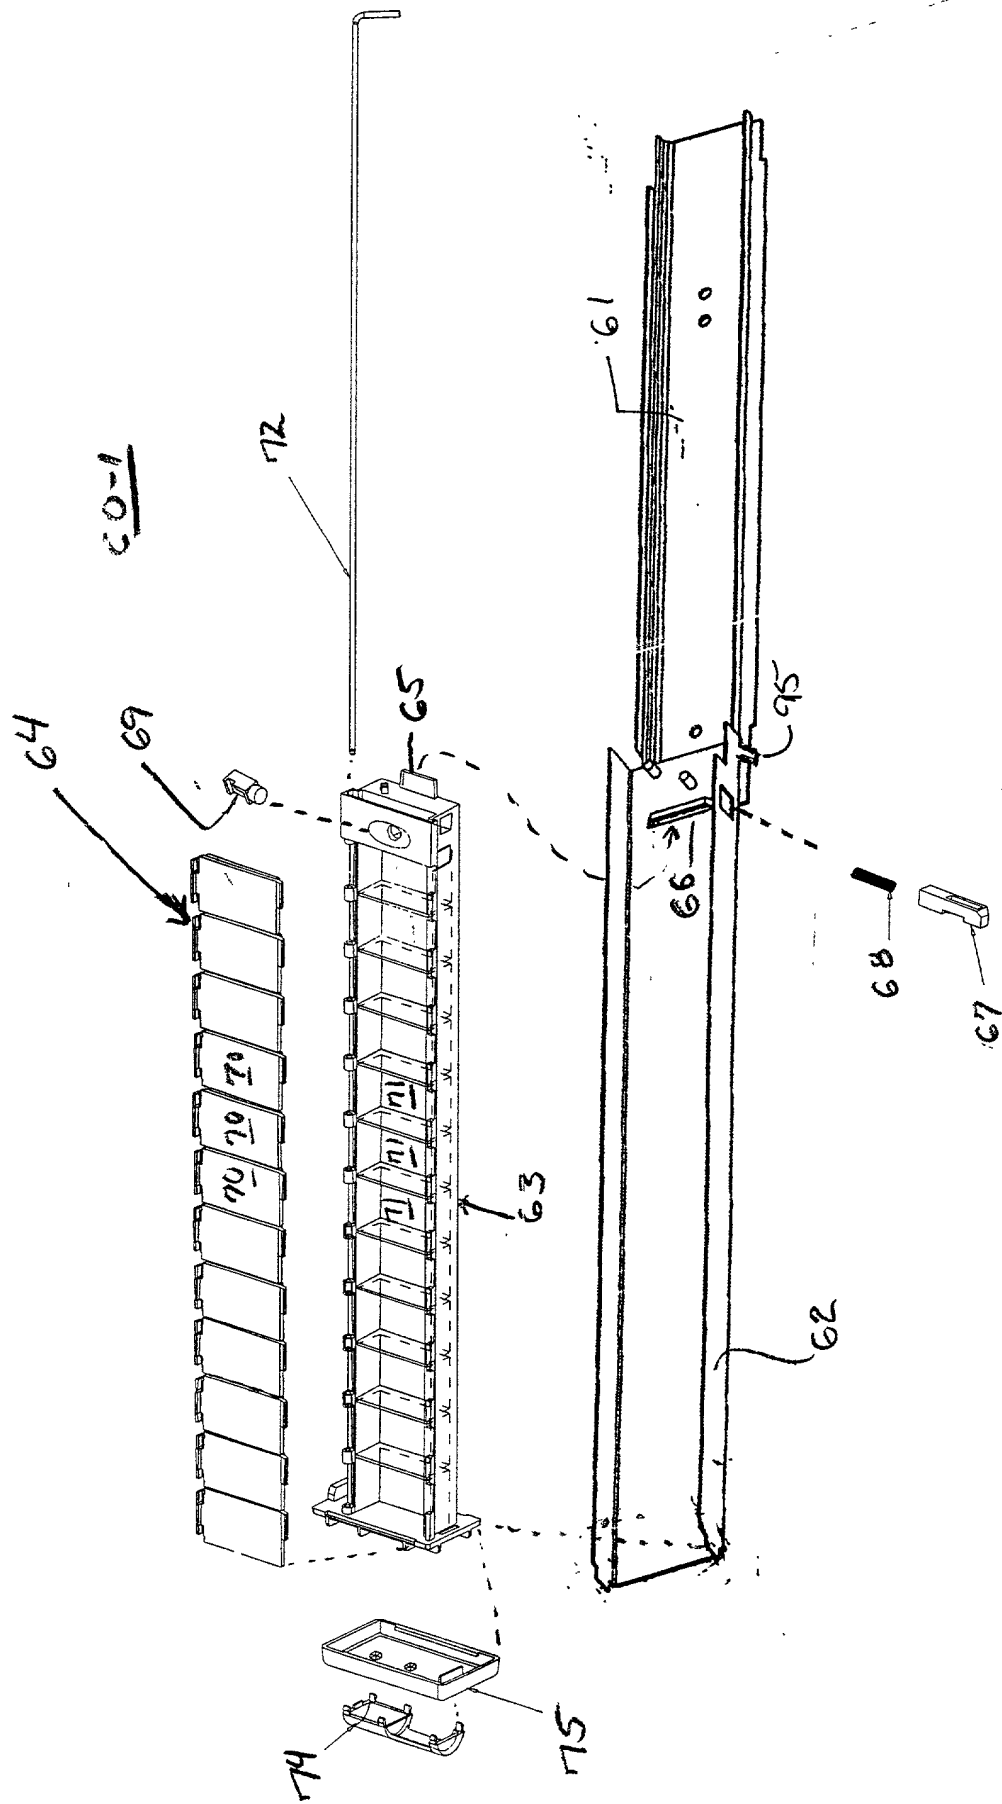
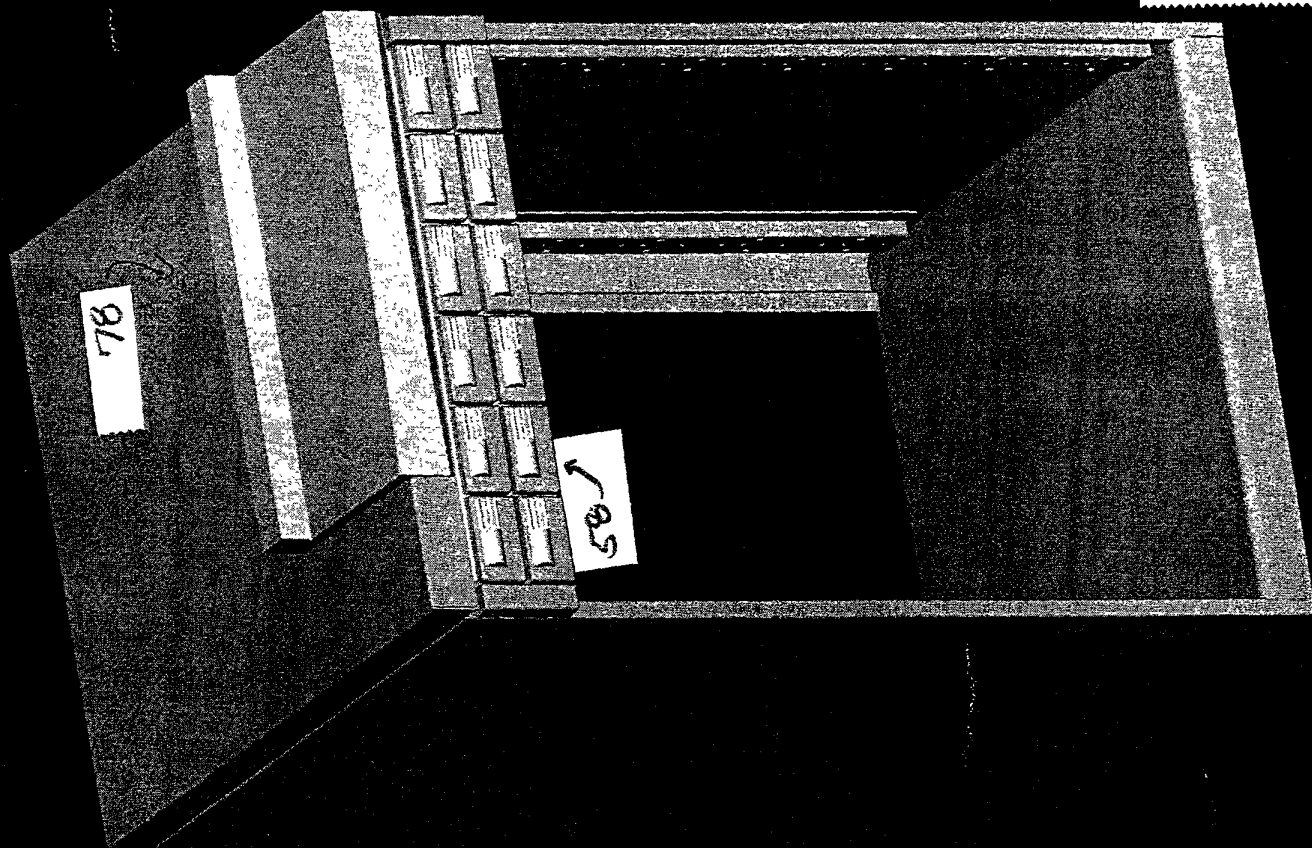
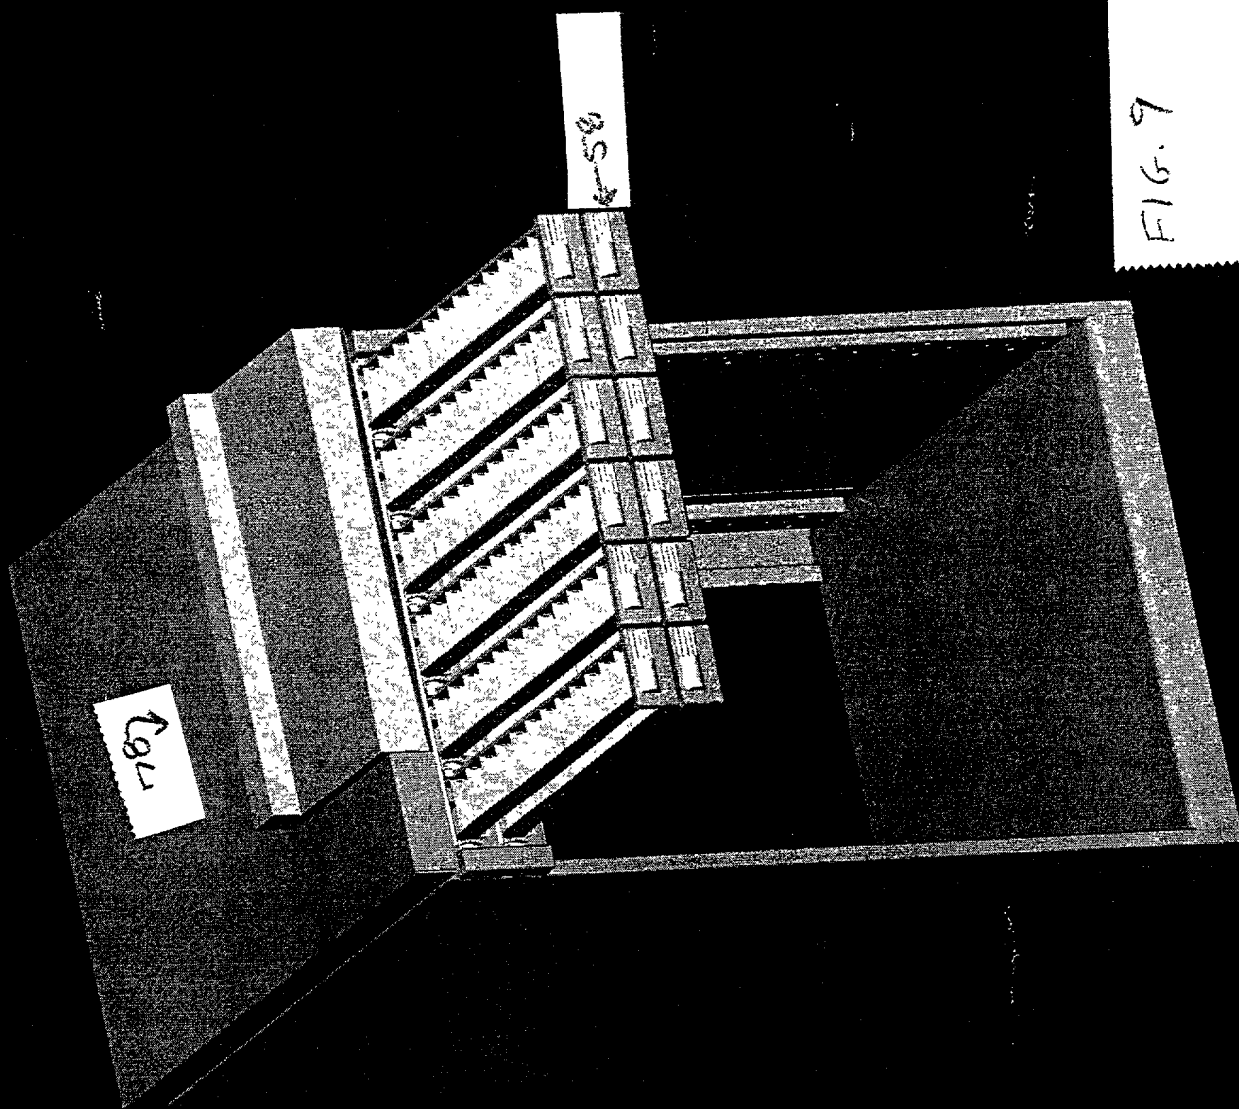


FIG. 7

FIG. 8





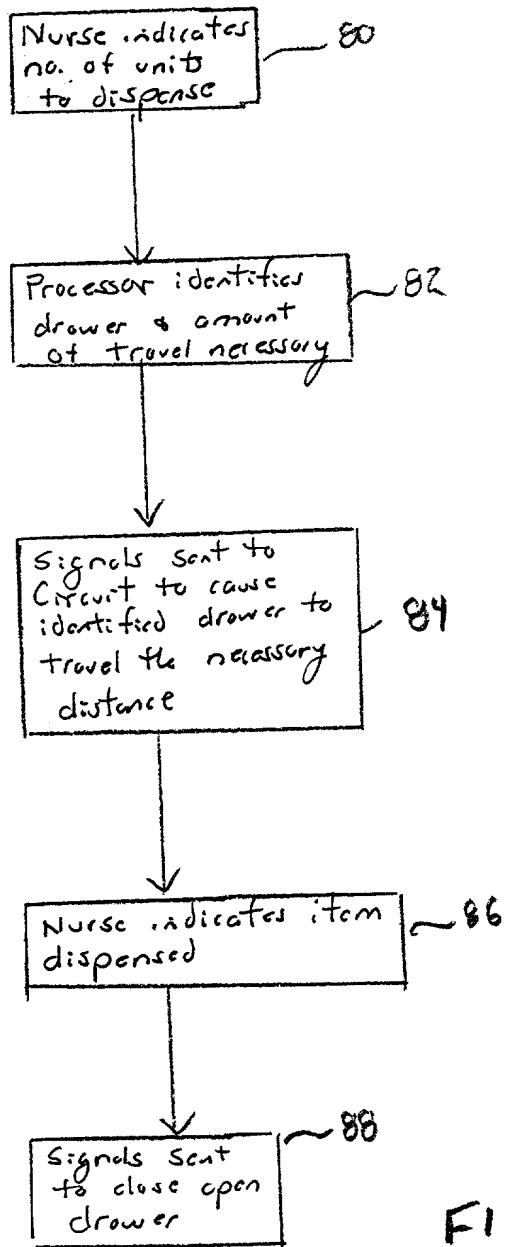


FIG. 10

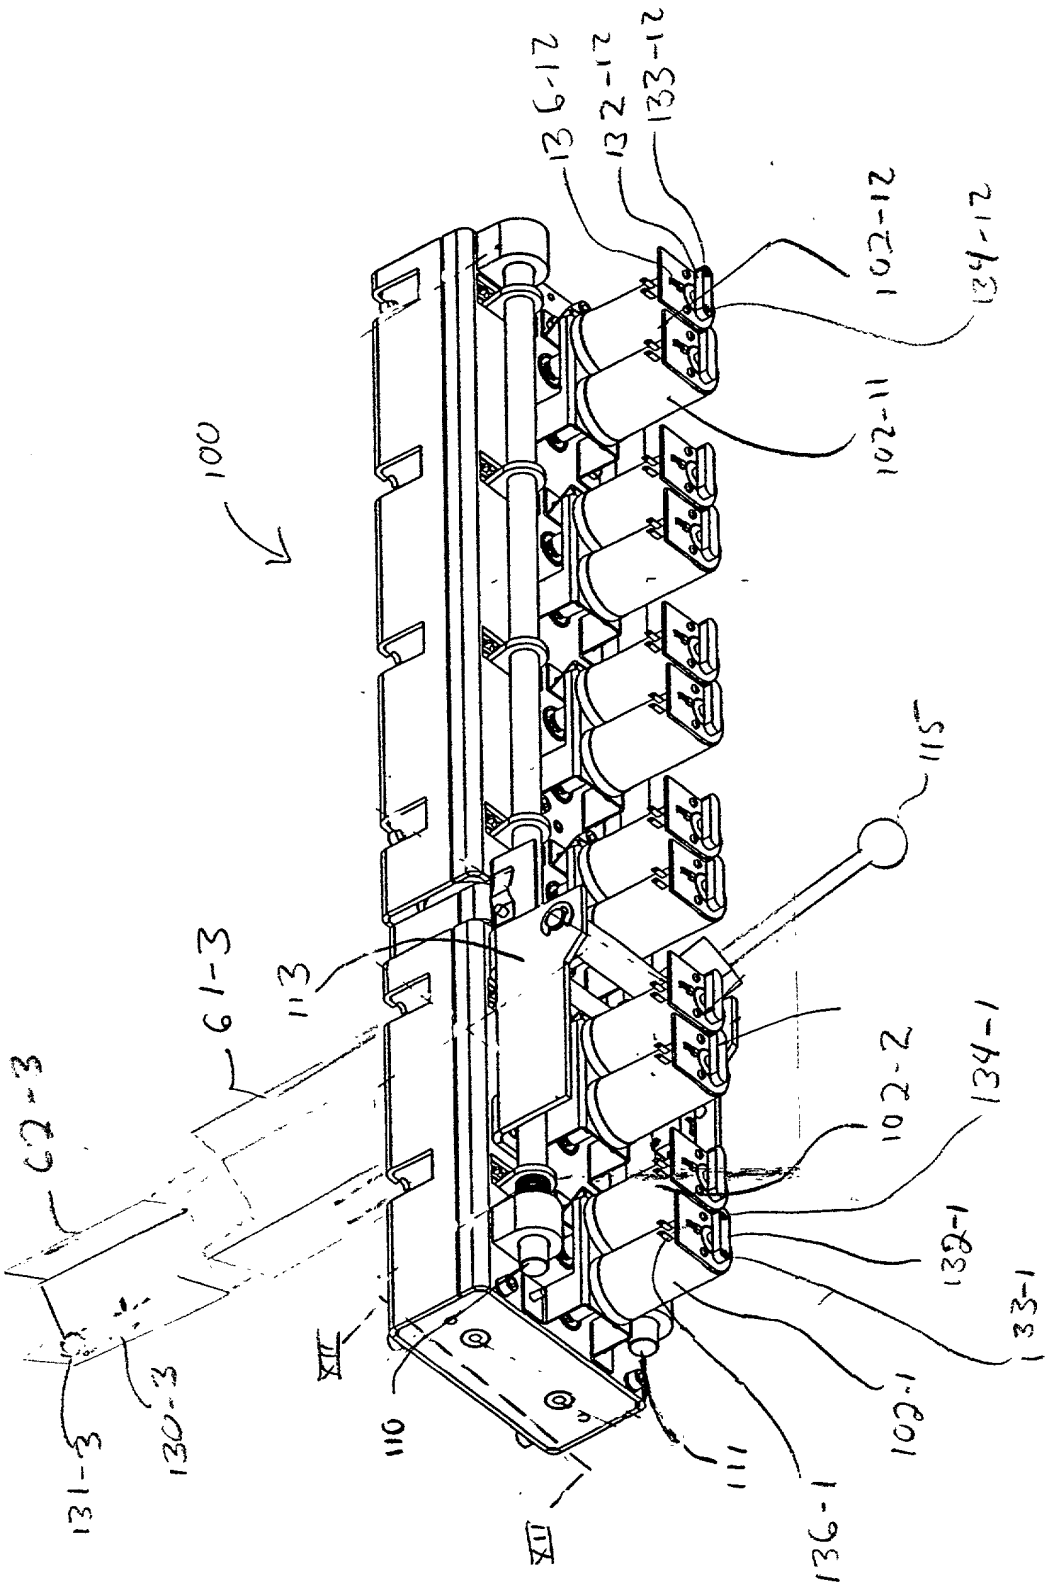


FIG. 11

FIG. 12

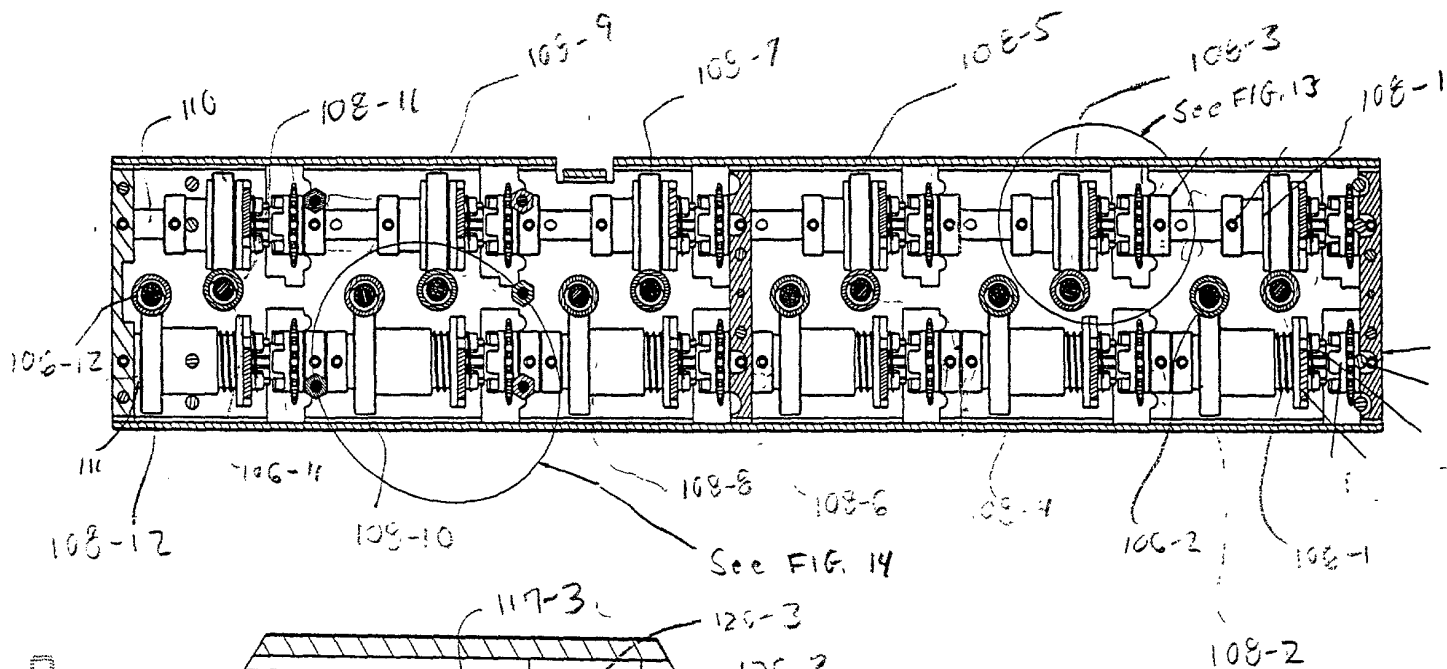


FIG. 13

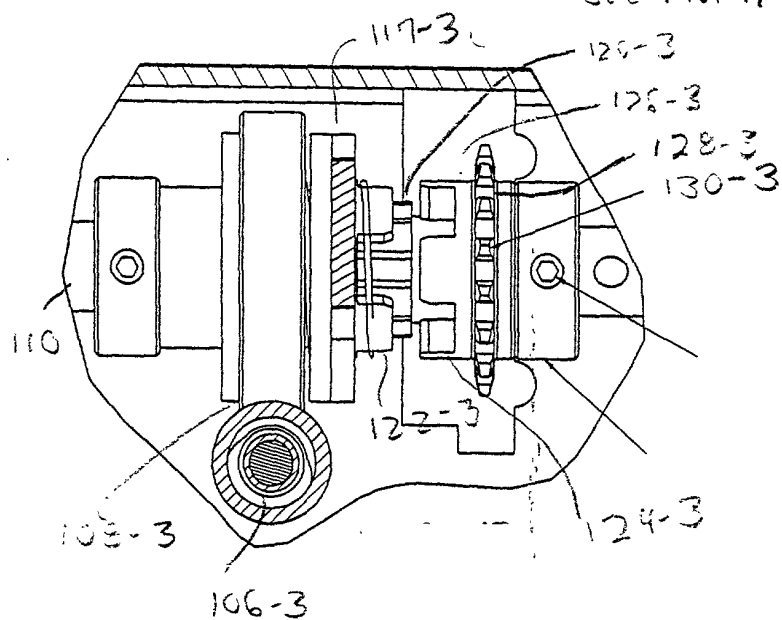


FIG. 14

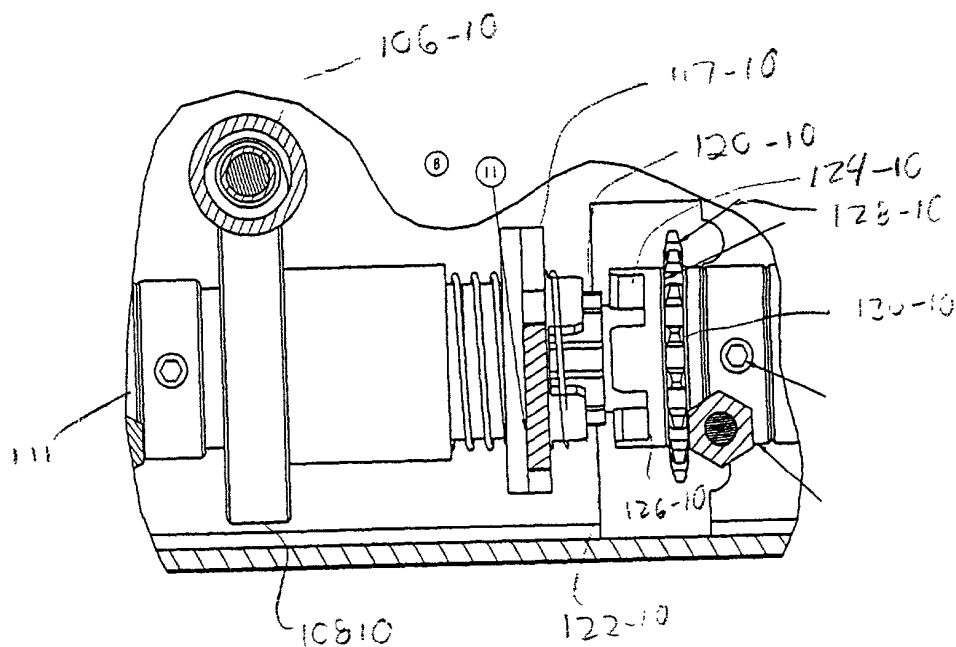
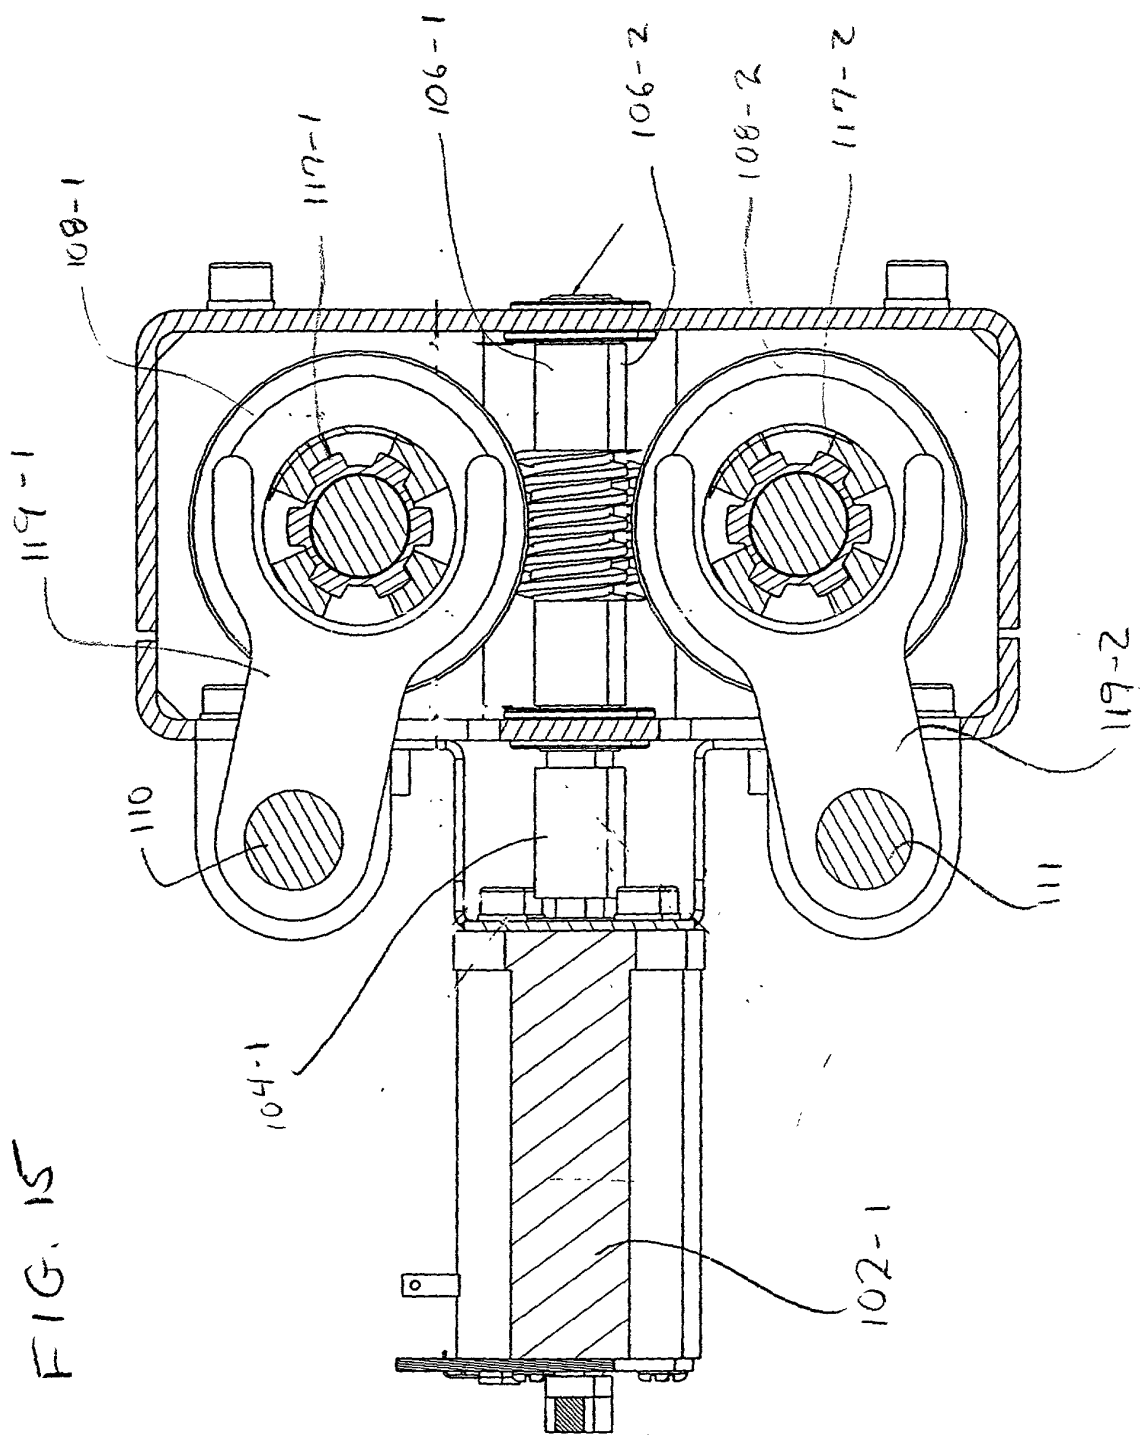


FIG. 12





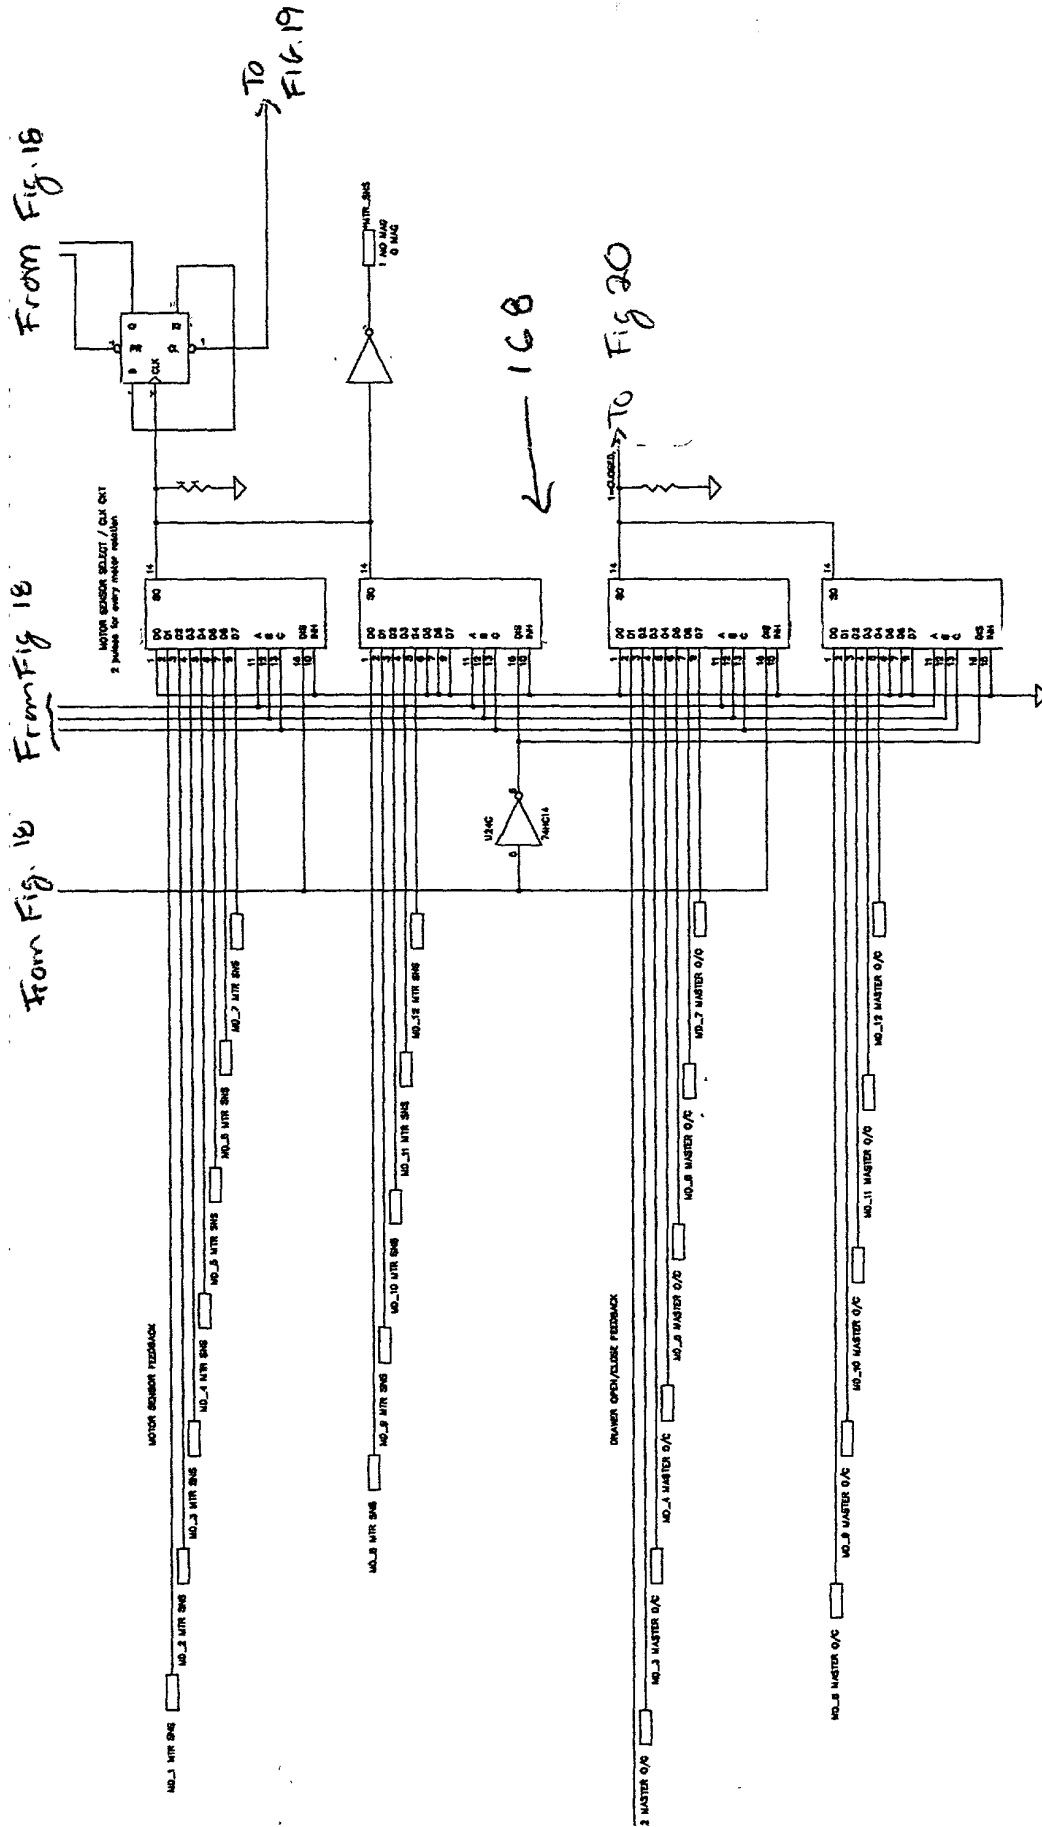
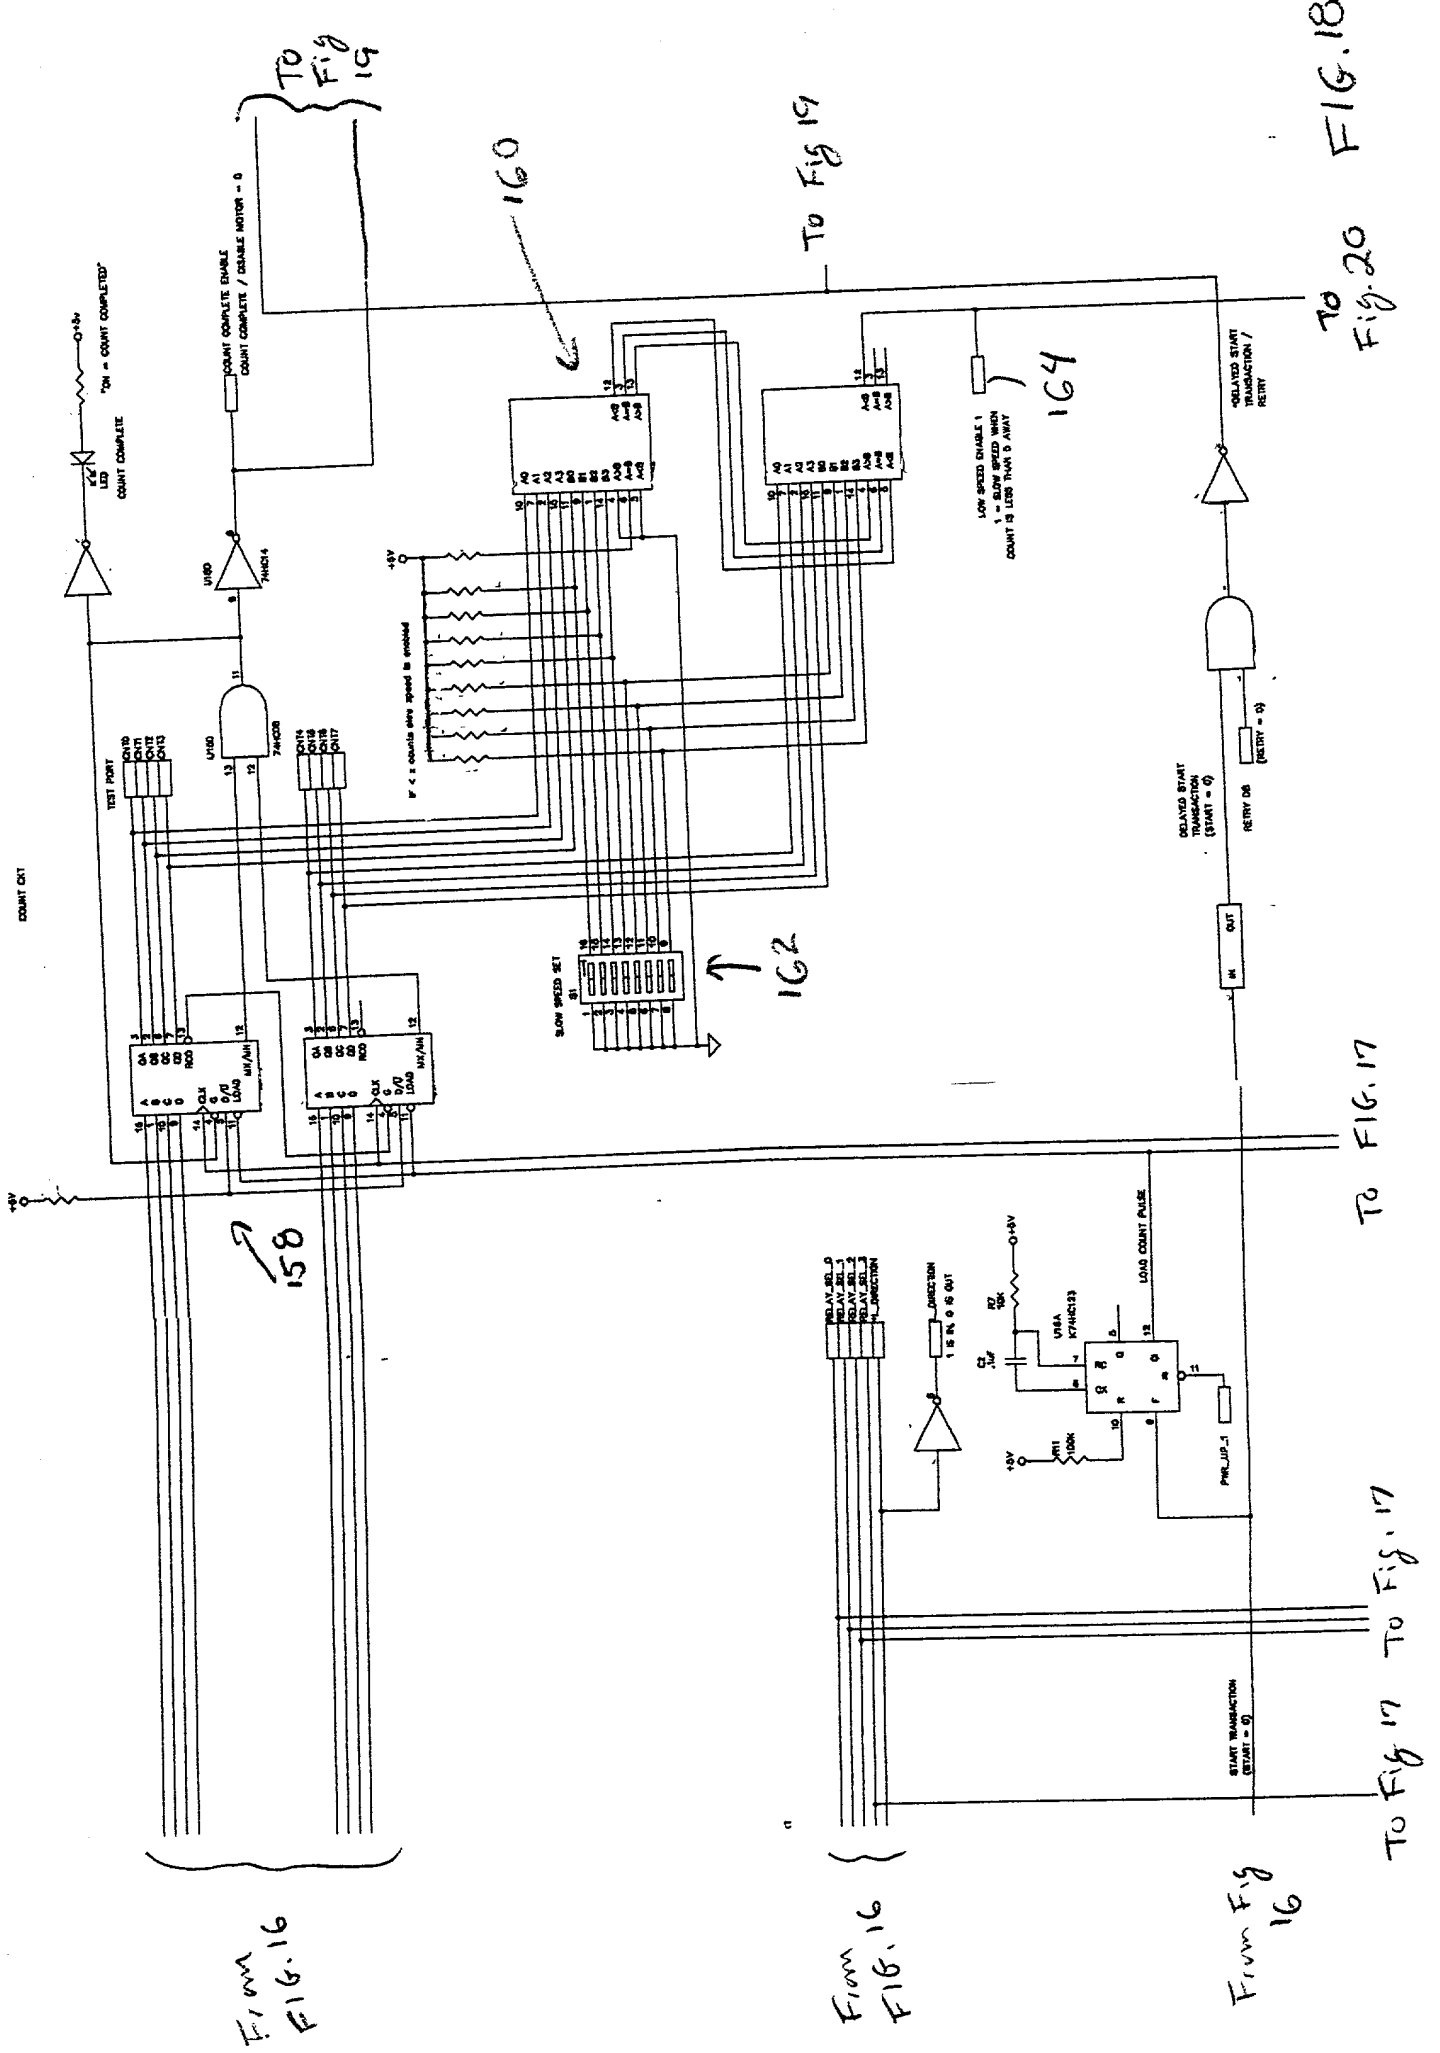


FIG. 17

[illegible]

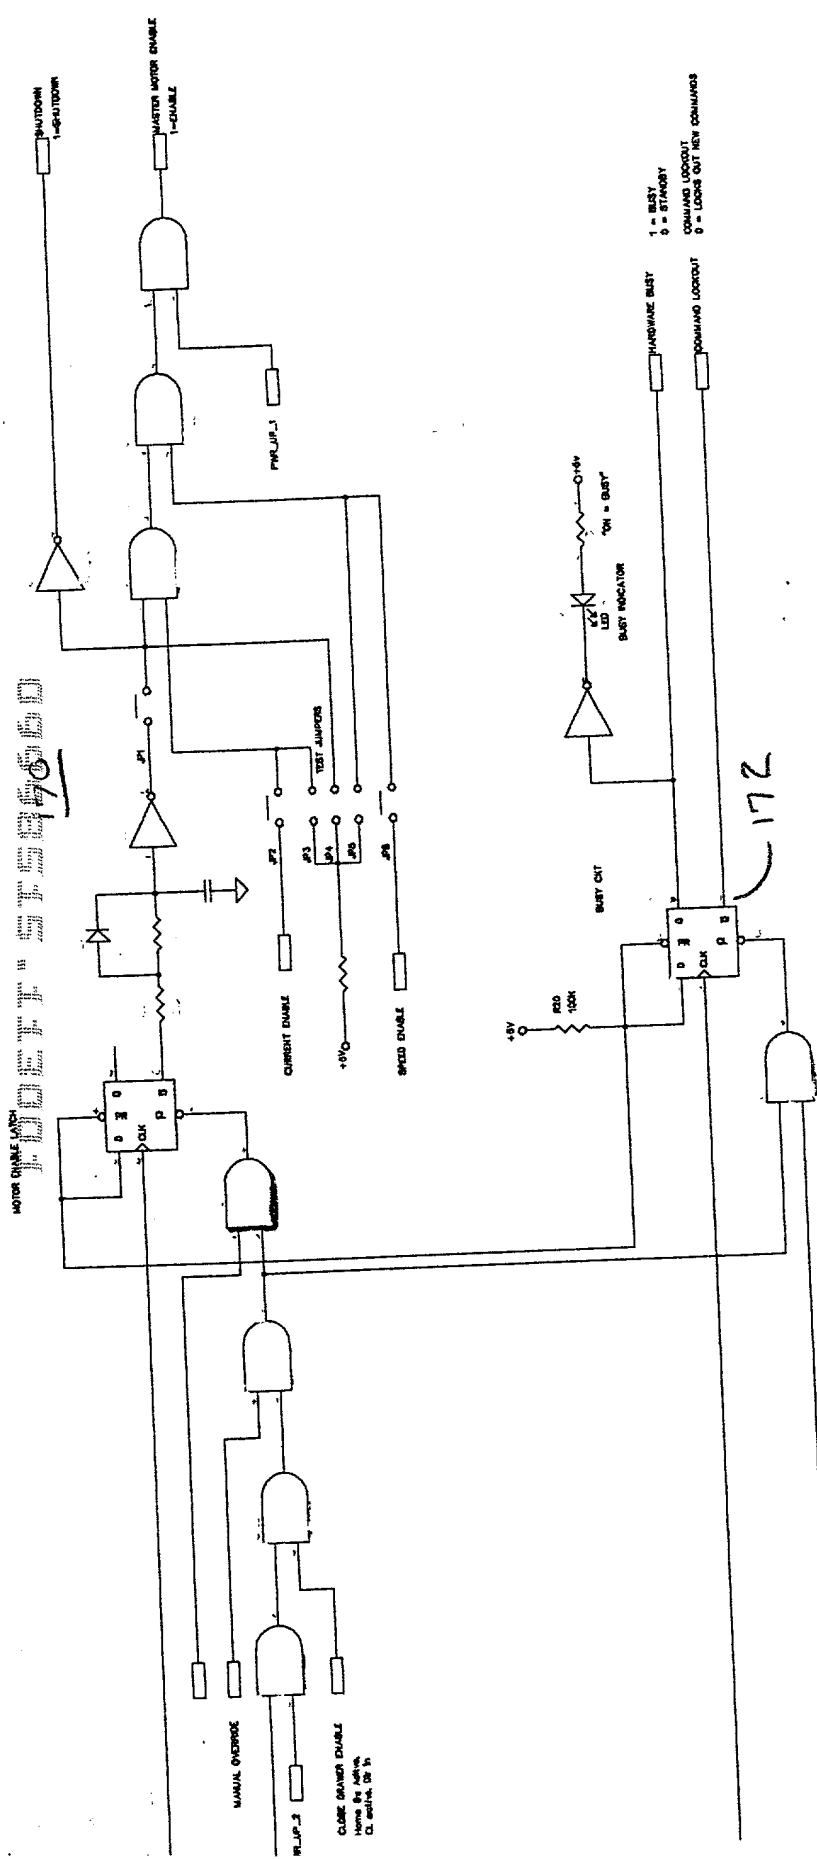


Fig 18

CLEAR ERROR IS
CHANGES
RESETS BUSY STATE
WHEN CLEAR ERROR IS SENT

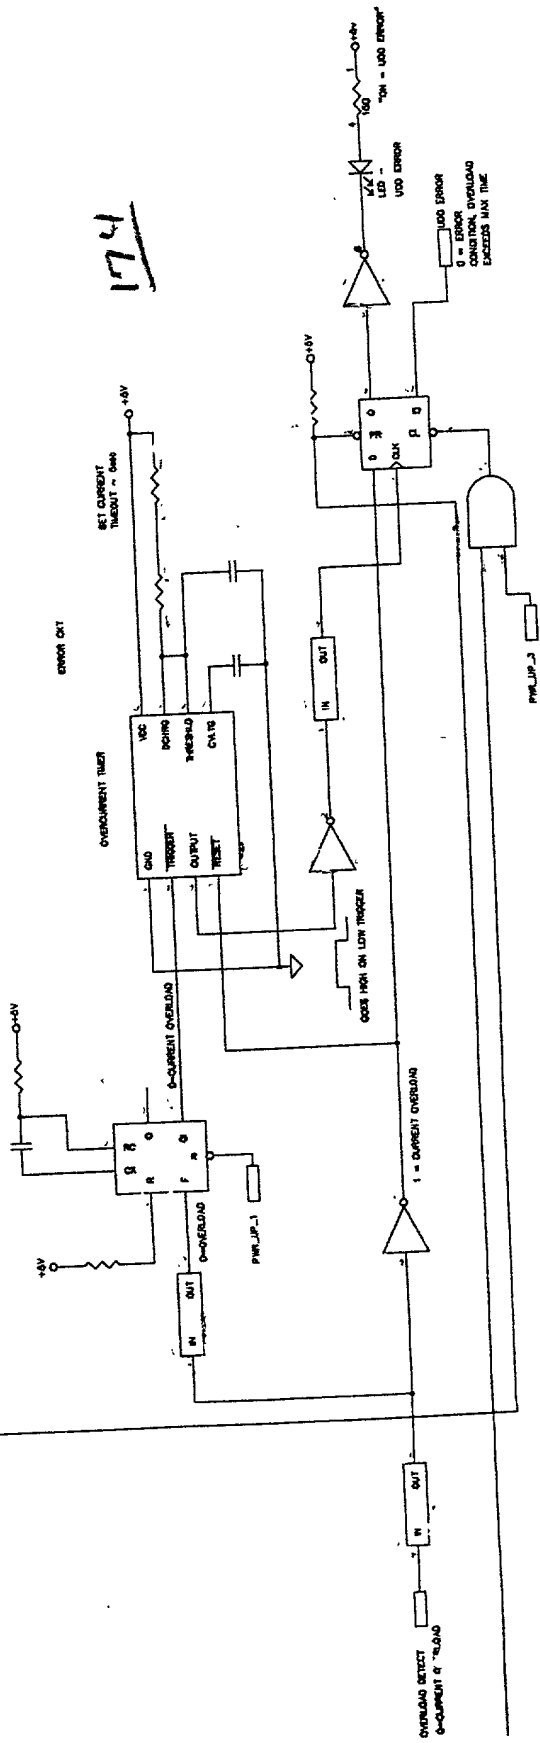


Fig 19

From Fig. 20

176

From Fig. 17

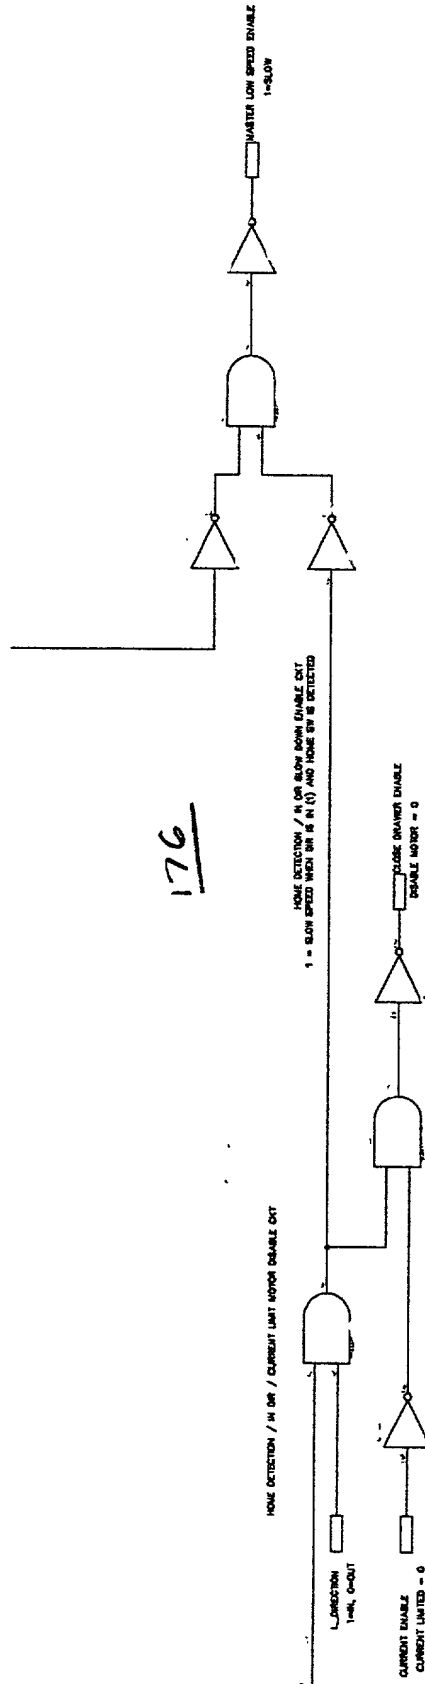


FIG. 20

FOOT" STS666D

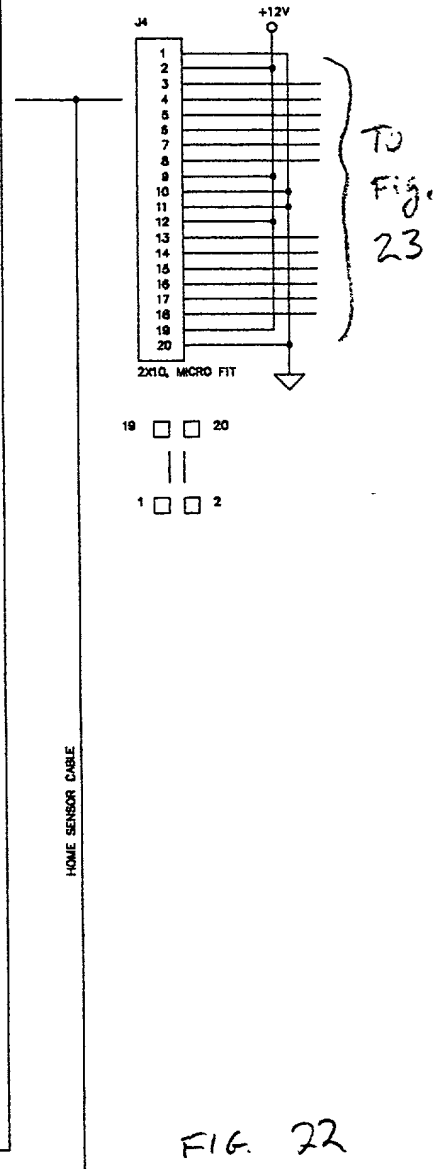
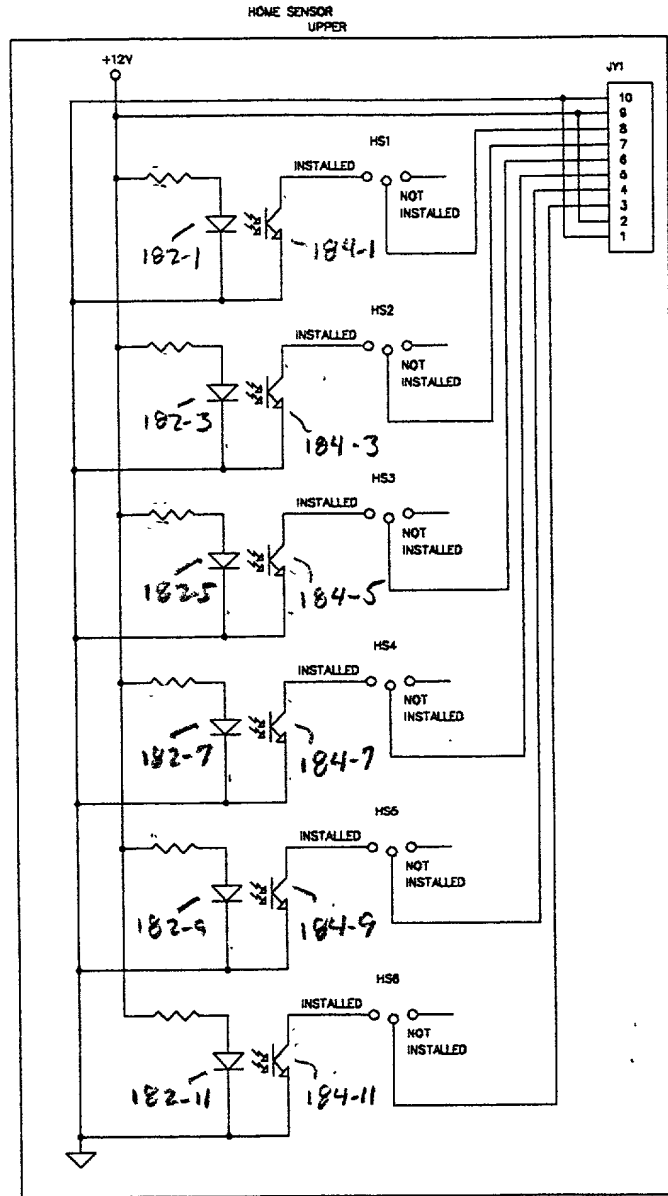


FIG. 22

From
Fig.
22

TO DEF. 575660

To Fig. 24

To Fig.
24

To
Fig.
17

To Fig 17

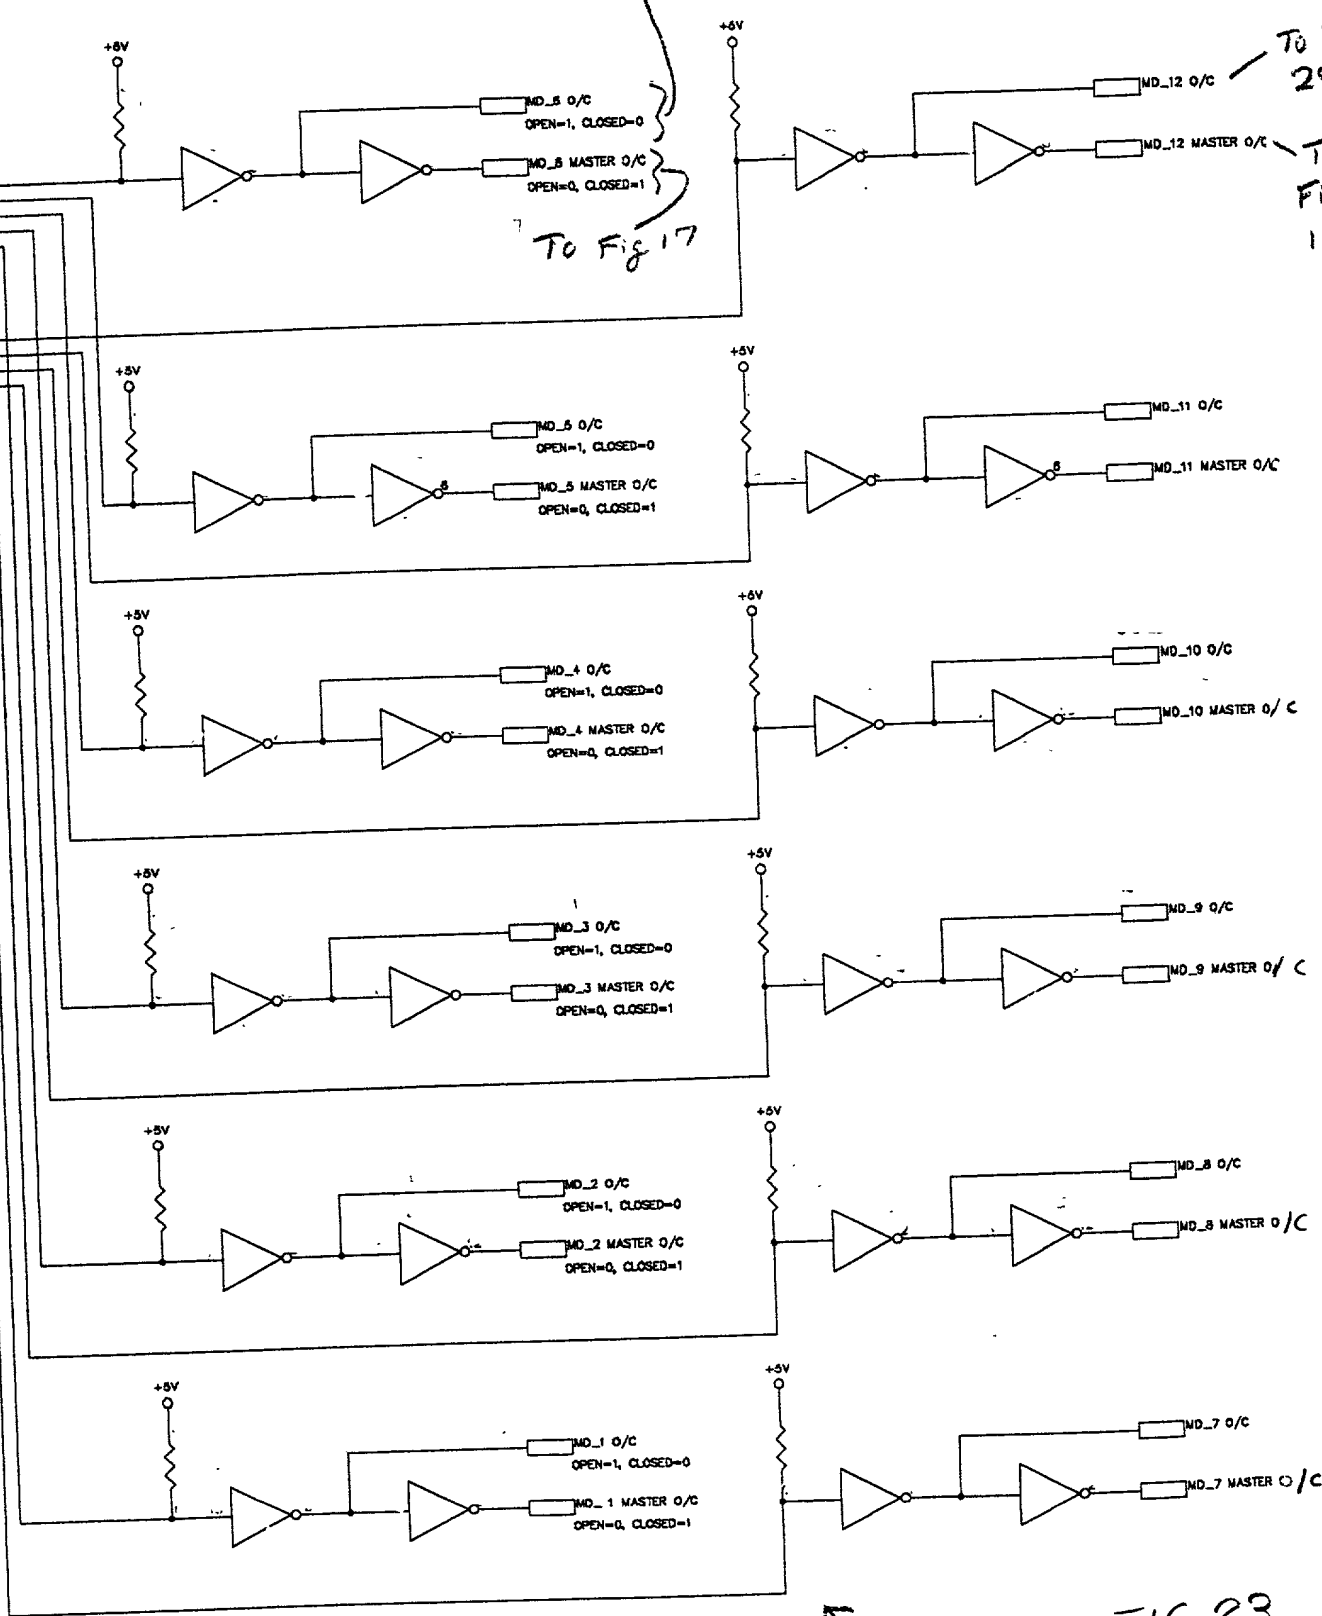


FIG. 23


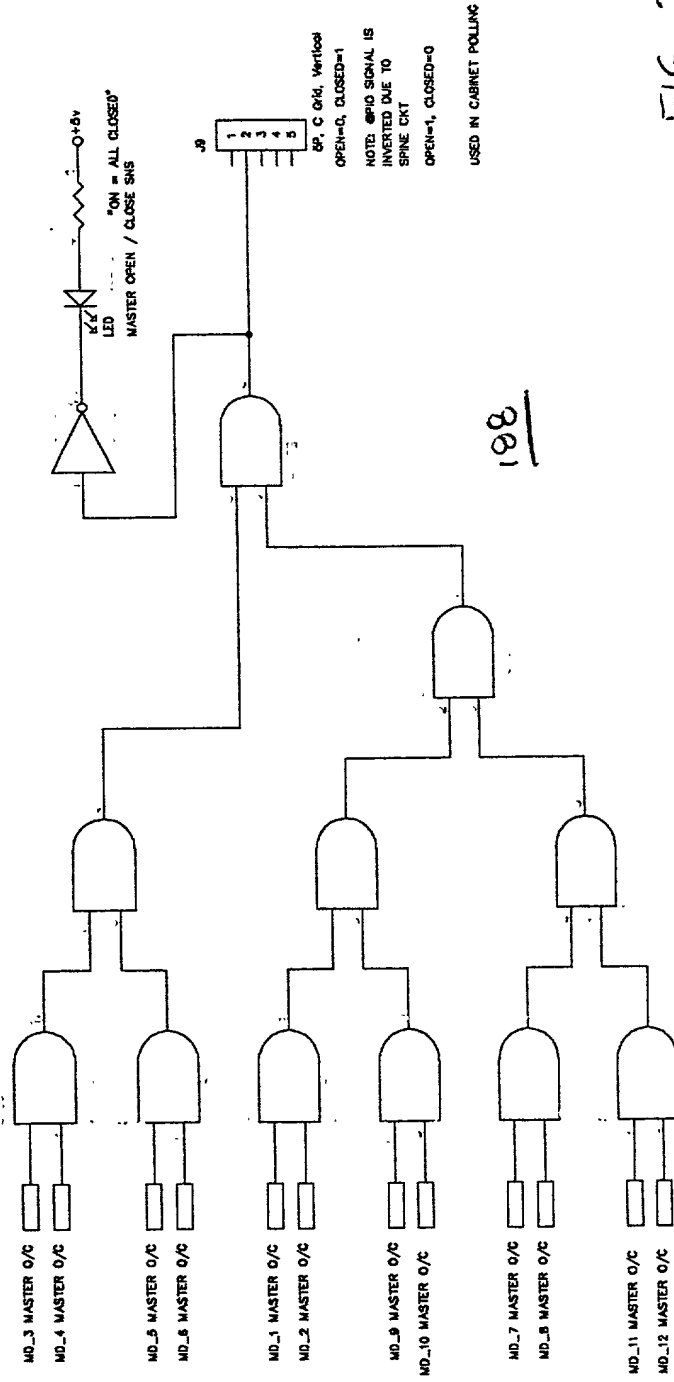


FIG. 24

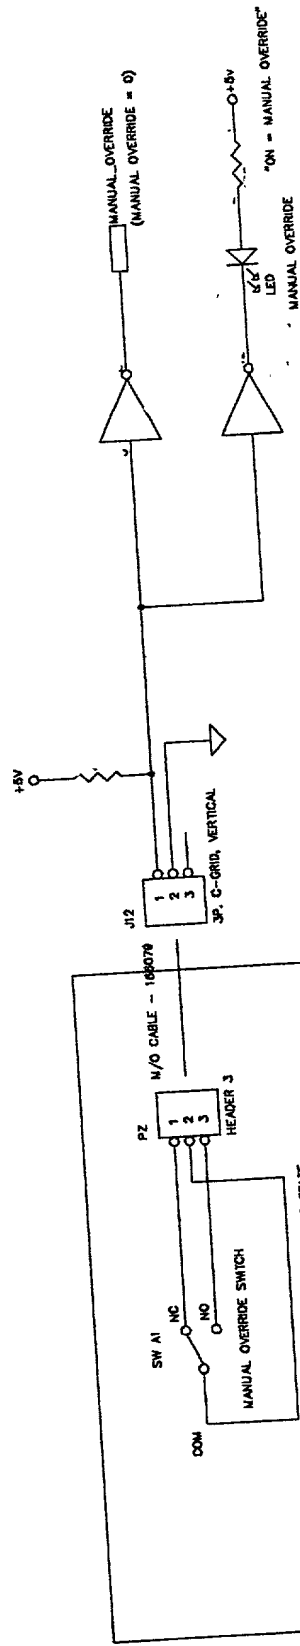


190

FIG. 25

[illegible]

↑ 194

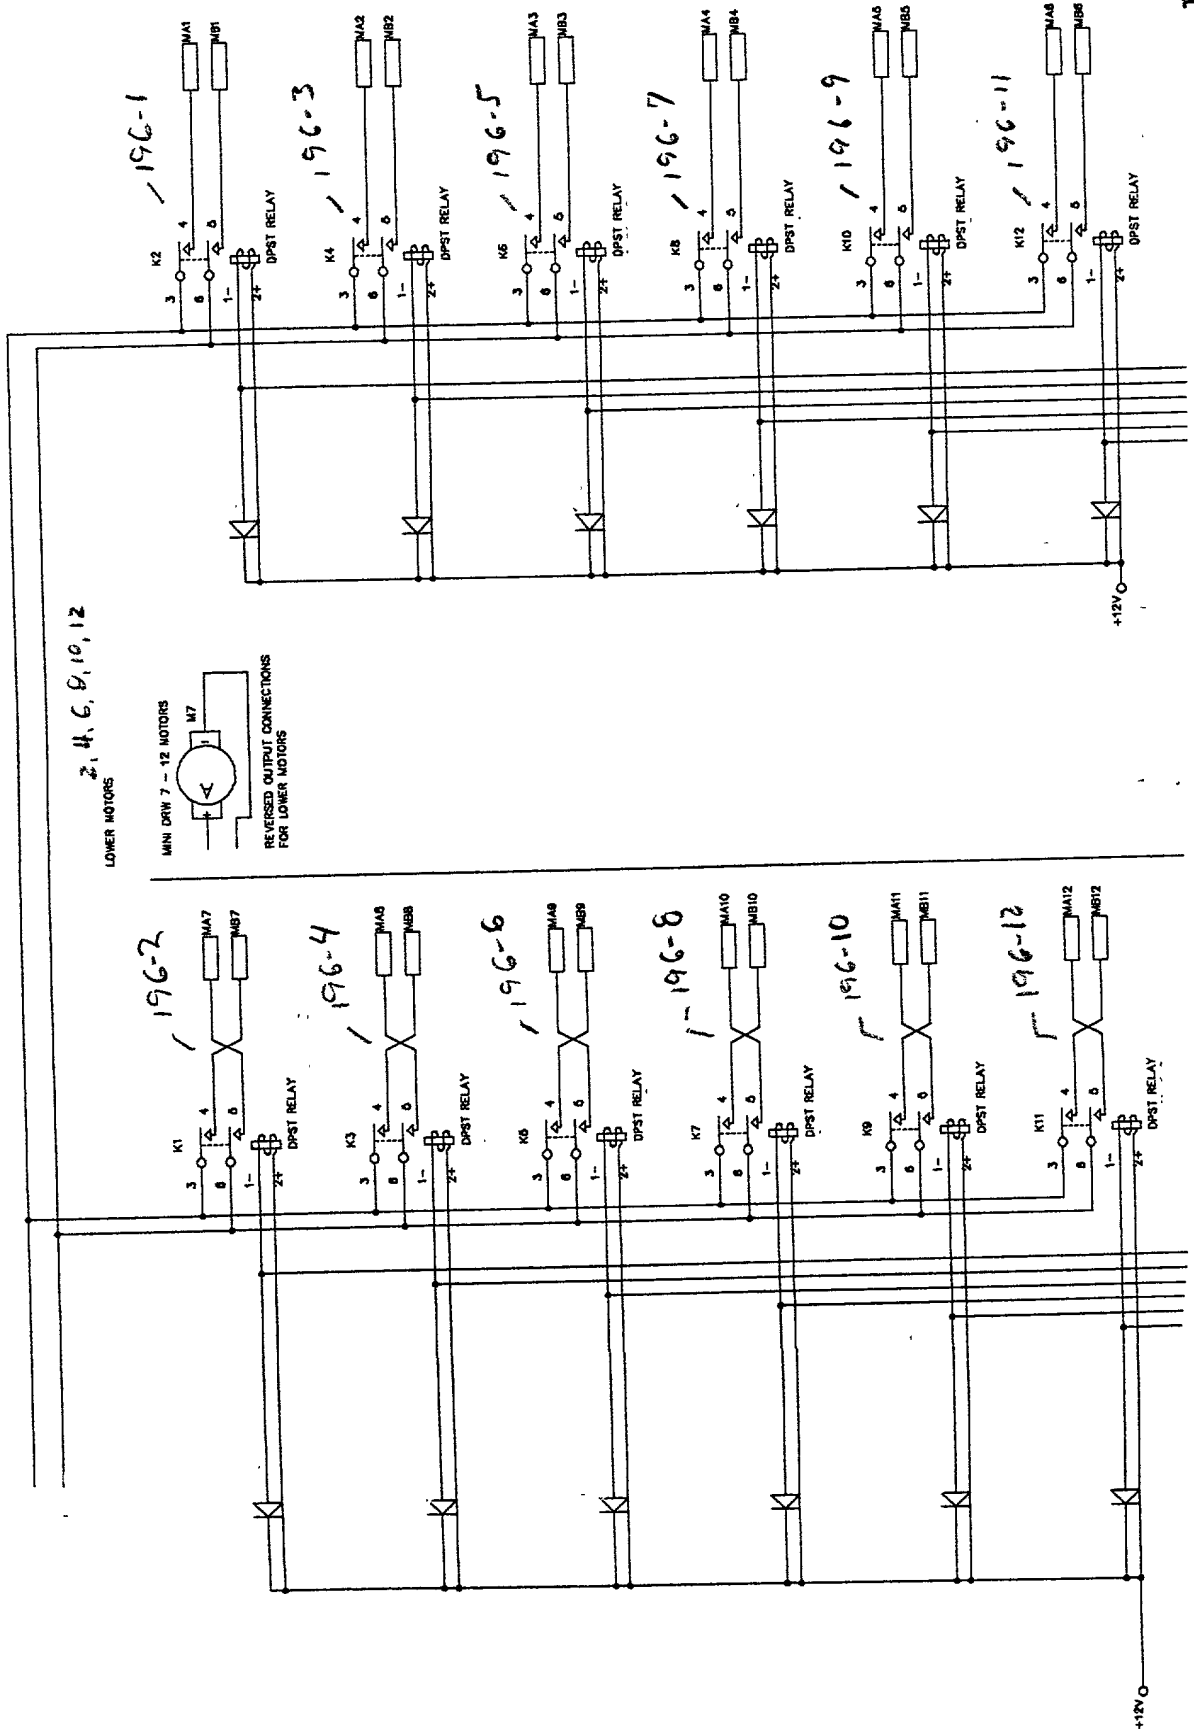

UPPER MOTORS 1, 3, 5, 7, 9, 11

